




Industrial vehicles




 **DOMAR**

Fast-fit stay


Tubo fast-fit
Fast-fit Rohr
Tube fixation rapide
Soporte fijación rápida

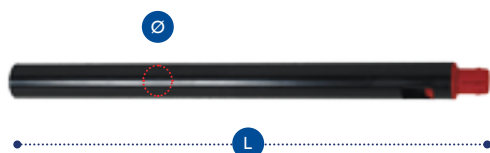


	L	Ø	Th
DK8080	495	33	2,5
DK8050	505	42	2,5
DK8051	700	42	2,5

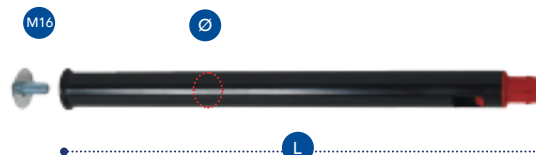

	L	Ø	Th
DK8082	495	33	2,5
DK8052	505	42	2,5
DK8053	700	42	2,5

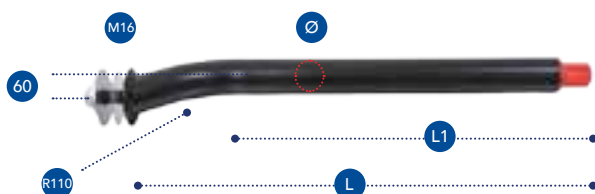

	L	L1	Ø	Th
DK8086	495	380	33	2,5
DK8056	505	390	42	2,5
DK8057	700	580	42	2,5

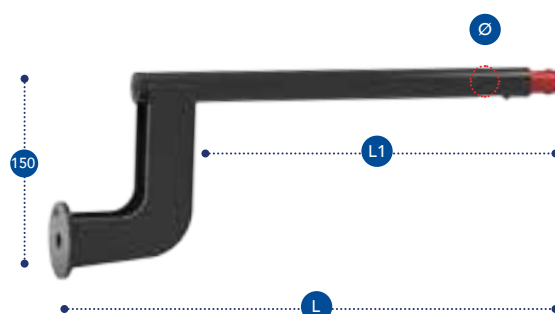

	L	L1	Ø	Th
DK8058	510	370	42	2,5